


Eclipse Linnox Burners

Spare Parts List 159

4/27/2012

Model ULE

Version 1

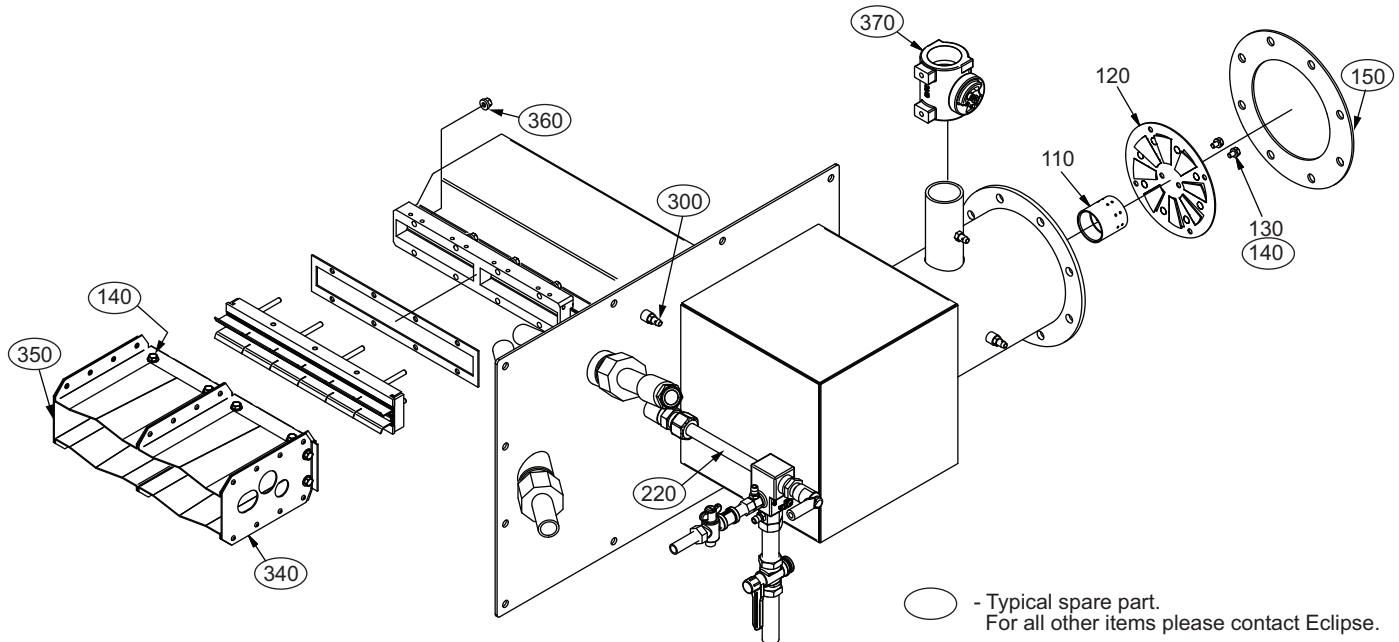

Ref	Part Number	Description
140	15881	Screw M6 x 1 x 12 mm
150	10057270	Linnox Mixer Spool Gasket, HC
150	10057272	Linnox Mixer Spool Gasket, LC
220	10056257	Igniter Pilot, NPT, 400 mm
220	10056258	Igniter Pilot, NPT, 600 mm
220	10056259	Igniter Pilot, NPT, 800 mm
220	10056260	Igniter Pilot, NPT, 1000 mm
220	10056261	Igniter Pilot, NPT, 1200 mm
220	10056443	Igniter Pilot, BSP, 600 mm
220	10056978	Igniter Pilot, BSP, 400 mm
220	10056979	Igniter Pilot, BSP, 800 mm
220	10056980	Igniter Pilot, BSP, 1000 mm
220	10056981	Igniter Pilot, BSP, 1200 mm
300	13445	Pressure Tap
340	10059281	Flame Shield Plate, 26 kW - 158 kW
340	10060553	Flame Shield Plate, 789 kW
340	10060703	Flame Shield Plate, 532 kW

Ref	Part Number	Description
340	10060705	Flame Shield Plate, 400 kW
340	10060707	Flame Shield Plate, 266 kW
350	00.4017119.00	Flame Shield End Plate, 26 kW - 158 kW
350	10060554	Flame Shield End Plate, 789 kW
350	10060704	Flame Shield End Plate, 532 kW
350	10060706	Flame Shield End Plate, 400 kW
350	10060708	Flame Shield End Plate, 266 kW
360	00.9343256.00	Nut
370	501218	Manual Butterfly Valve, 1.5" NPT, Full Port
370	501219	Manual Butterfly Valve, 2" NPT, Full Port
370	101106	Manual Butterfly Valve, Rc1.5" BSPT, Full Port
370	101107	Manual Butterfly Valve, Rc2" BSPT, Full Port