

Limerick Airport Business Center Pottstown, PA 19464

Phone: (610)495-5131 Fax: (610)495-5134 www.watsonmcdaniel.com

SERIES WLDI900

FLOAT TYPE LIQUID DRAINER INSTALLATION INSTRUCTIONS

INSTRUCTION PART NO. 2263700

REVISION A


INSTALLATION

- 1. Before installing the liquid drainer, blow out piping thoroughly to remove loose scale and dirt. Use pipe dope or teflon tape sparingly when attaching the drainer to the pipe. Observe the pressure limitation shown on the drainer label.
- 2. Install the drainer below the equipment being drained in a location easily accessible for maintenance and inspection. Be certain that the flow arrow on the drainer cover points in the proper direction.
- 3. Install a drip pocket to keep dirt away from the drainer.
- 4. Discharge piping should be amply sized to avoid excessive back pressures.
- 5. To provide for easy maintenance and service, install a block valve on each side of the drainer and install a strainer ahead of the inlet connection.
- 6. All valves should be full ported to achieve the rated capacity of the drainer.
- 7. If the discharge piping is to be elevated, be certain that the available differential pressure is adequate to permit proper drainage. Remember, two feet of lift equals approximately one psi.

MAX OPERATING PRESSURES

WLD-15	15PSIG
WLD-30	30PSIG
WLD-90	75PSIG
WLD-150	150PSIG
WLD-200	200PSIG
WLD-250	250PSIG

BODY COVER FLOAT VALVE DISC MAIN VALVE ASS'Y HOUSING

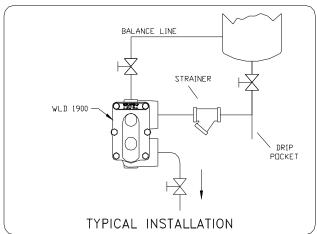

PMO 250 PSIG **PMA** 250 PSIG up to 450°F 450°F 450°F @ 250PSIG TMO TMA

ORDERING SPARE PARTS

Specify the description of the part. Indicate the Model Number, Size and Operating Pressure, which are shown on the name plate.

Typical Specification: Cover & Gasket for 2" WLD-150 liquid drainer.

TROUBLESHOOTING

PROBLEM

- 1) Drainer does not discharge.
- Drainer does not close.

CAUSE

- a) Damaged float.
- b) Operating pressure too high.
- a) Dirt lodged on seat.
- b) Worn out internals.

ACTION

- a) Replace float.
- b) Install drainer suitable for operating pressure.
- a) Clean trap; install strainer.
- b) Replace internal; be sure to match the model no. and pressure.

Each Watson McDaniel Company Product is warranted against defects in material and workmanship for one year from date of shipment. This warranty extends to the first retail purchaser only. All defective material must be returned to the person from whom you purchased the Product, transportation prepaid, free of any liens or encumbrances, and if found to be defective will be repaired free of charge or replaced, at the warrantor's or seller's option. If the material is replaced, any replacement will be invoiced in the usual manner and after inspection of alleged defective material an adjustment will be made for depreciation caused by purchaser's use. In no event will Watson McDaniel Company be liable to do more than refund the original contract price. Incidental and consequential damages are excluded, whether under this warranty or otherwise. All implied warranties, including warranties of merchantability and fitness for a particular purpose, are disclaimed and excluded.